




Title : How to skip the warm up message in the panel .

When we power up the machine, and the panel shows a message < Wait for laser warm up ** sec>, it is because the sleep mode is activated.

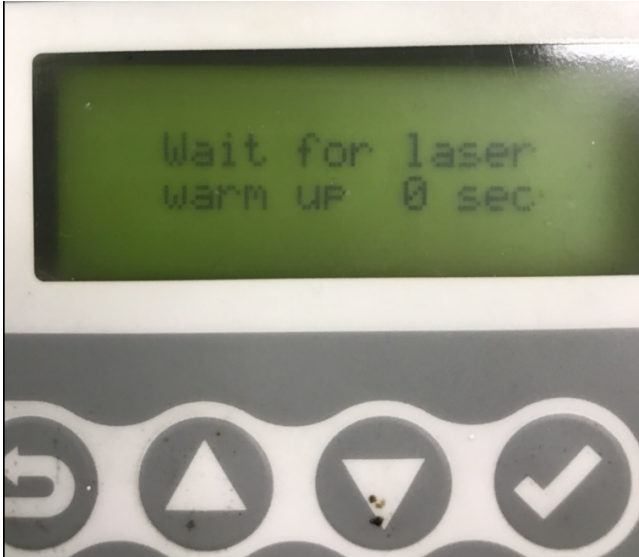

You can go to panel 4. System Setup / Configuration / Sleep mode, and change it to Off. Power off the machine and power up again, it will be vanish.

